

# Hero Patrol - Deluxe FIRE TRUCK

## Size: A5, 1C/1C

	<b>Final Output Approval</b> (Hong Kong Office use only)	
	Signature	Date of approval
Art Dept. Approved		
Engineer Approved		
QA Engineer Approved		
Remarks:		
Description:		
Scale:		
Material Code:		
Date:	22 Oct. 2020	
Prepared By:	Eddy Nie	



**WARNING:**  
CHOKING HAZARD—Small parts.  
Not for children under 3 years.

### INSTRUCTION FOR USE

INSTRUCTIONS SHEET MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION. These operating, installation, and safety instructions are integral parts of the product.

#### IMPORTANT:

Please read all "CONSUMER INFORMATION" before operating this toy. ADULT SUPERVISION REQUIRED.

**Note to Adults:** to ensure that the child's play is both safe and fun, please review all operating instructions and safety tips in the CONSUMER INFORMATION section with your child. Assembly and disassembly are to be carried out by adults. Batteries must be inserted in the toy by an adult.

#### CONSUMER INFORMATION

##### CONTENTS

- 1 x Vehicle
- 3 x AA Batteries

#### INSTALLING BATTERIES IN THE VEHICLE (See Diagram 1)

1. Requires 3 (three) "AA" batteries (included).
1. Using a screwdriver (not included), remove the battery compartment door.
2. Remove and properly dispose of the used batteries (if any).
3. Insert the 3 "AA" batteries, with polarity (+/-) as shown inside battery compartment.
4. Replace the battery compartment door and use a screwdriver to lock the compartment door.

#### BATTERY SAFETY INFORMATION

- Toy surface may become hot and cause burns if the electronics get wet.
- Remove batteries if vehicle will not be used for a long period of time to prevent possible battery leakage.
- Dispose of batteries safely. Do not dispose of batteries (or products containing non-replaceable batteries) in fire, as batteries may explode or leak.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- Non-rechargeable batteries are not to be recharged.
- The supply terminals are not to be short-circuited.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
- Do not allow any battery or its holder to contact metal objects such as keys or coins.
- Keep batteries out of the reach of children.

#### CLEANING INSTRUCTION

To clean, wipe excess dirt from toy. Remove batteries first. Wipe toy clean with damp cloth. Wipe dry. DO NOT IMMERSIVE IN

WATER and DO NOT CLEAN THE TOY WITH ANY CHEMICALS. Let the toy completely dry before putting batteries back into clean, dry battery compartment.

#### INSTRUCTION FOR DISPOSAL OF WASTE

- Your batteries and electronic toys should be recycled or disposed per your local waste management guidelines.
- Contact your local waste management officials for information regarding the environmentally sound recycling and disposal of batteries and electronic toys.

#### FCC WARNING:


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device must not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician for help.

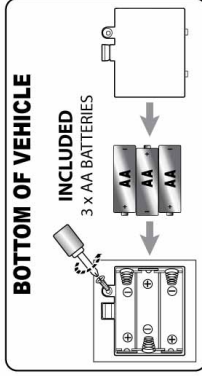

F31919-0000-ISH-EN02A P1/2

## Important! Problems?



For customer support  
please contact us at:

**cs@jadatoys.com or  
1-800-679-5232**

Between the hours of 9:00 am to 6:00 pm :  
Pacific Time : Monday – Friday

**WWW.JADATOYS.COM**

**U.S.A. & Canada**  
Jada Toys, Inc. warrants to the original consumer purchaser that this product will be free of defects in material and workmanship for thirty (30) days from the date of purchase. Jada Toys will repair or replace the product, at our sole discretion, in the event of such a defect within the warranty period.

In the event of a defect covered under this warranty, first call the phone numbers listed below. Many problems can be solved in this manner. If necessary, you may be asked to return the product for a replacement or refund at the place of purchase (please refer to the retailer's return policy) or you may be instructed to return the product (postage paid and insured by the consumer) to the address below. Include your name, address, telephone number, copy of dated sales receipt, and a brief explanation of the defect. Repair / replacement and return shipment will be free of charge. Please return the defective part or unit, packed securely. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. If the product is returned without a dated sales receipt, the product may be excluded from coverage under this warranty.

Jada Toy's liability for defects in material and workmanship under this warranty shall be limited to repair or replacement, at our sole discretion, and in no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). This warranty is exclusive, and is made in lieu of any express or implied warranty. Valid only in U.S.A. and Canada. This warranty gives you specific legal rights and you may have other rights, which may vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

TOLL-FREE NUMBER: 1-800-679-JADA (5232)

(valid only in U.S.A. and Canada)

Hours: 9:00 A.M. – 6:00 P.M. Pacific Time, Monday – Friday.

Expect some delay in January following the holiday season.

Please be patient and keep trying the toll-free number.

**Address for Returns:**  
Consumer Relations, Jada Toys, Inc.  
938 Hatcher Ave. City of Industry, CA 91748, USA



Electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.  
Products with batteries should not be disposed of with household waste. Please recycle where facilities exist.  
Check with your local authority or retailer for recycling advice.



We reserve the right to improve or amend product specifications. Colors may vary.  
Jada oval mark is a registered trademark of Jada Toys, Inc.

©2021 JADA TOYS, INC. CITY OF INDUSTRY, CA 91748, USA  
MADE IN CHINA

F31919-0000-ISH-EN02A P2/2